



Specifications - Installation and Operating Instructions

INSTALLATION

Follow steps #1 through #5 for SFI-800 installation on the front of Bulletin F-47.


Step #6: Incoming flow is connected the port which has the flow adapter installed by the manufacturer. For best performance a straight section of pipe with a minimum of 10 times the tube diameter should be used at the inlet.

Follow steps on Bulletin F-47 for A-711, A-712, or A-713 sensor option installation.

Use the following equations to calculate gallons per minute:


OUTPUT SIGNALS (for units with A-711 Option)

White Wire Connection:

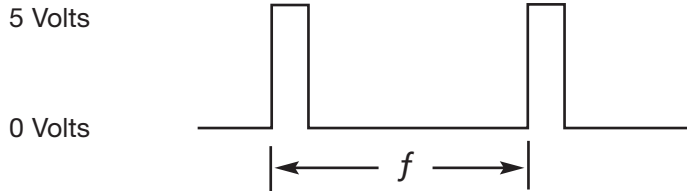

GPM = Freq (Hz) / 14.46 for SFI-800-1/2"

Green Wire Connection:

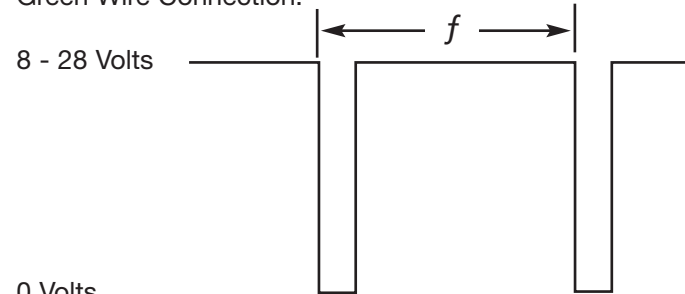

GPM = Freq (Hz) / 14.46 for SFI-800-1/2"